

EasiLight 8 Zone RGB+CCT Smart Wallplate Remote Controller

MS-F0B8


1. Features

With an elegant look and high precision touch IC, this glass panel remote gives you control over 8 distinct zones. Using the popular 2.4GHz frequency, this remote controls less power while still boasting improved speeds, strong anti-interference capacity, and long distance transmissions.

 
This remote can control selected EasiLight smart lights by allowing you to choose from various colours, colour temperatures, saturation and brightness levels.

2. Product Key Diagram

Note: When touching buttons, the LED indicator lamp will flash once and make a noise. This is not the case with the touch sliders. You can turn this feature on and off by long pressing the ON and OFF buttons for 10 seconds.

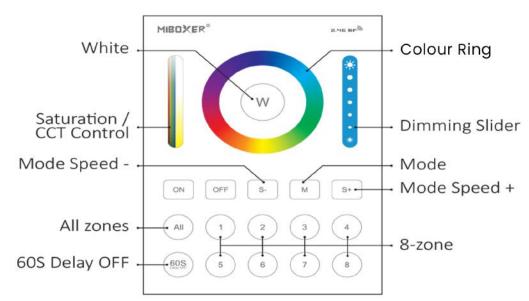





- This dimmer will adjust the brightness.
- W Press this button for pure white light.
- ON This button will turn on all linked lights. Long press it for 10 seconds to turn on the button sounds.

In white light mode, this slider will adjust the colour temperature.

- OFF This button will turn off all linked lights. Long press it for 10 seconds to mute the button sounds.
- the button sounds.

 M Switch to dynamic mode.
- S- Slow the speed of dynamic mode.
- S+ Accelerate the speed of dynamic mode.
- All Control all linked lights.
- After 60 seconds, the lights will switch off. Press again to cancel this.
- $\begin{pmatrix} 1 \end{pmatrix} \bullet \bullet \bullet \begin{pmatrix} 8 \end{pmatrix}$ Each button corresponds to a zone. Push it to control that zone only.

3. Linking/Unlinking Instructions

Linking Instructions

 


Click the zone 1-8 button you want to link. That button will shine.



Switch off the light you want to link. After 10 seconds, switch the light on again.

Short press the ON button 3 times within 3 seconds.



The light will blink 3 times slowly to indicate the linking was successful.



If the light doesn't blink slowly, the link has not been successful. Please follow the above steps again.

 
Note: Lights that have been linked can't link again.

Unlinking Instructions




Click the zone 1-8 button you want to unlink. That button will shine.

Note: you must select the same zone your light is linked to.



Switch off the light you want to link. After 10 seconds, switch the light on again.

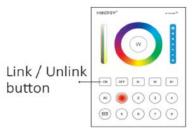

Short press the ON button 5 times within 3 seconds.




The light will blink 10 times quickly to indicate the linking was unsuccessful.





If the light doesn't blink quickly, then the unlinking has not been successful. Please try again.


Note: If a light hasn't been linked yet, you won't need to unlink it.

4. Installation

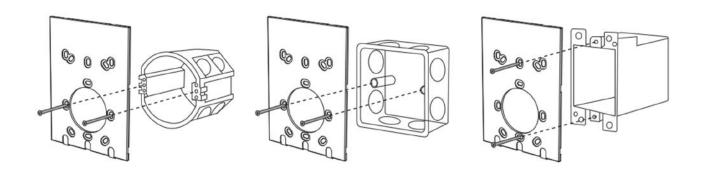

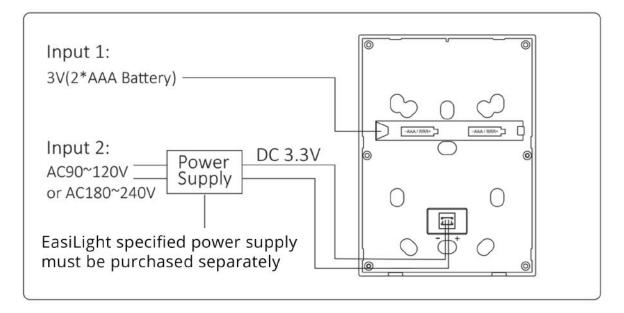

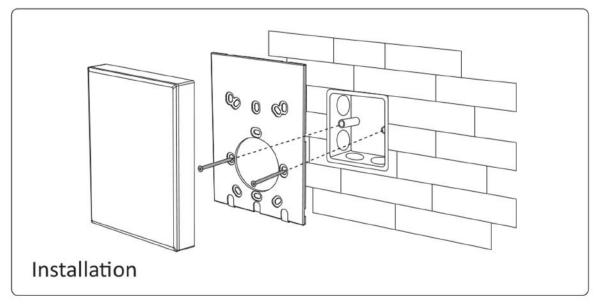

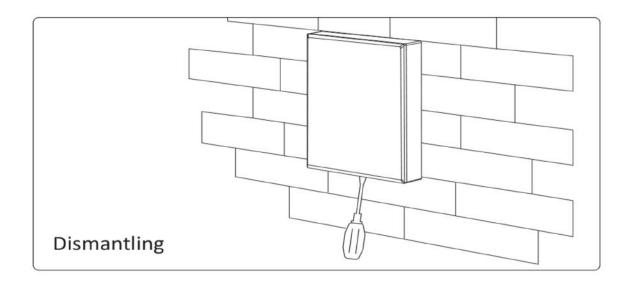

5. Attention

- 1.Please check the cable and make sure the circuit is correct before turning the controller on.
- 2.Please handle with care, especially during installation, to avoid breaking the glass panel.

MIRAORSTONE

sales@mirrorstone.co.uk www.mirrorstonelighting.co.uk/ 86 Scudamore Road Leicester, LE3 1UQ +44 (0) 116 321 4121