MIR AORSTONE

5 IN 1 LED CONTROLLER (ZIGBEE 3.0 + 2.4G)



CONTENTS

Product Features	3	
Set Up Output Mode	4	
Comparible With Remote	4	
2.4G RF Remote Control Instruction	5-7	
Link / Unlink Instructions	5	
Auto Transmitting & Synchronization	6	
Dynamic Mode Table Selection	6	
PWM Frequency Switching	7	
 "Do Not Disturb" Mode Is Activated & Shut Down 	7	
Smartphone App Control Instruction	8	
Philips Hue Control Instruction	g	
Alexa Voice Control Instruction		
Google Home Voice Control Instruction	11	
DMX512 LED Transmitter Control Instruction	12	
Connect To LED Strip Diagram	13	
Attention	14	

PRODUCT FEATURES

Made by new Zigbee 3.0 wireless transmitting technology with low power consumption, strong ability to build network automatically and anti-interference.with MiBoxer Zigbee gateway to get wireless dimming color, remote control, timing control, group control, music rhythm function. Support 2.4G RF remote control.



16 Millions of colors to choose



Support 2.4G Remote control



Color temperature adjustable



Auto-transmitting & Synchronization



Dim brightness / Saturation



Support Smartphone app control (Zigbee 3.0 gateway is needed)



Follow Zigbee 3.0 standard protocol



Support third party voice control (Zigbee 3.0 gateway is needed)



Support Zigbee 3.0 remote control (Zigbee 3.0 gateway is needed)



DMX512 controllable (Only for RGB+CCT output mode DMX512 LED transmitter is needed)

Various Control Solution:



Philips Hue



MiBoxer Zigbee Gateway



IKEA TRÅDFRI



2.4GHz Remote



Amazon Echo Plus



SET UP OUTPUT MODE

Set up correct output mode based on the feature of lights Setting method: Press "SET" button continuously to switch output mode (attention it will log out without operation within 3 seconds)

Output mode sheet (conïfirm output mode based on color of indicator)


Indicator color	White Light	Yellow Light	Red Light	Green Light	Green Light
Output	Output	Output	Output	Output	Output

Compatible With These 2.4G RF Remote Controls (Purchased Separately)






B0 / B0-B

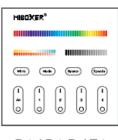

B4 / B4-B / T4

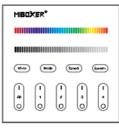

B3 / B3-B / T3




S2-B / S2-W S2-G



FUTD01

2.4G RF REMOTE CONTROL INSTRUCTION


1) Linking Code Instructions

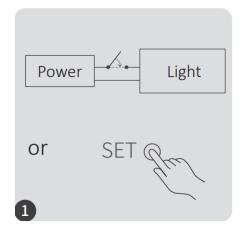

Power off 10 seconds and power on again or short press "SET" one tme



Short press "I" button 3 tmes within 3 seconds.

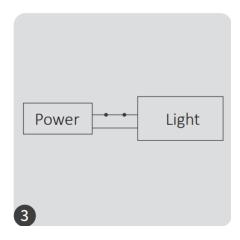


Lights blink 3 tmes slowly means linking is done successfully.



Linking failed if light is not blinking slowly, Please follow above steps again. (Note: Light that have linked can't link again)


2) Unlinking Code Instructions

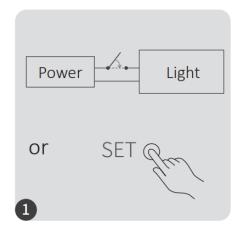

Power off 10 seconds and power on again or short press "SET" one tme



Short press "I" button 5 tmes within 3 seconds.

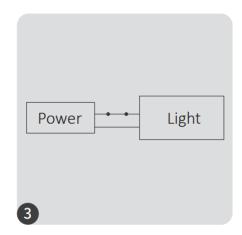

Lights blink 10 tmes quickly means unlinking is done successfully



Unlinking failed if light is not blinking quickly, Please follow above steps again. (Note: Light haven't linked that don't need to unlink)


3) Auto transmitting & Synchronization (Only For Remote Control)

Remote Signal Auto Transmitting

One light can transmit the signals from the remote control to another light within 30m, as long as there is a light within 30m, the remote control distance can be limitless.

Dynamic Modes Auto Synchronization

Multi lights can synchronize if they are in same dynamic mode and linked with same remote (distance between each light is within 30m)

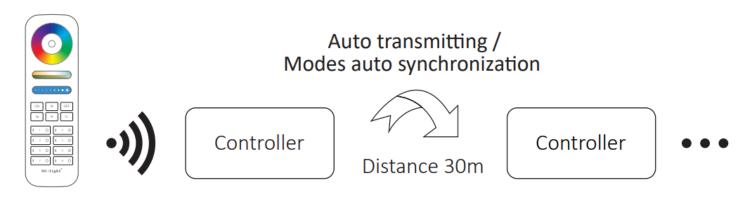

4) Dynamic Mode Table Selection (Only For Remote Control)

Select Dynamic Mode Table 1:

While the light is in static mode, short press "S+" button 5 tmes quickly until blue light flashes 3 tmes slowly, static mode is activated successfully.

Select Dynamic Mode Table 2:

While the light is in static mode, short press "S-" button 5 tmes quickly until yellow light flashes 3 tmes slowly, static mode is activated successfully.

Dynamic Mode Table 1 (Default)

Number	Dynamic Mode	Brightness / Saturation / Speed
1	Mardi Gras	
2	Automatic color change	
3	Sam	
4	Gemstone	
5	Twilight	Adjustable
6	American	
7	Fat Tuesday	
8	Party	
9	Slow Color Splash	

Dynamic Mode Table 2 (Need To Switch Manually)

Number	Dynamic Mode	Brightness / Saturation / Speed
1	Seven colors gradual change	
2	White light Gradual change	
3	RGB gradual change	
4	Seven colors jump to change	Adjustable
5	Jump to change randomly	
6	Red light gradual change +Flash 3 tmes	
7	Green light gradual change +Flash 3 tmes	
8	Blue light gradual change +Flash 3 tmes	
9	White light gradual change +Flash 3 tmes	

5) PWM High Frequency / Low Frequency Switching (Only For Remote Control)

Switch To High Frequency (16KHz):

Press "OFF" button 1 tme within three seconds and press "ON" button 5 tmes, Activated successfully once led light flashes 2 tmes quickly.

Switch To Low Frequency (250Hz):

Press "ON" button 1 tme within three seconds and press "OFF" button 5 tmes, Activated successfully once led light flashes 2 tmes slowly.

6) "Do Not Disturb" Mode Is Activated & Shut Down (Default Activated)

Turn on "Do Not Disturb" mode (wide using in the area which have power failure frequently to save energy)

2.4G RF Remote Turn On And Turn Off instruction

Turn On "Do Not Disturb" Mode:

Press "OFF" button three tmes within three seconds and press "ON" button three tmes, Activated successfully once led light flashes four tmes quickly.

Attention: Do Not Disturb Mode Is Activated

- 1. When the light is OFF status (For example: Use app or remote to turn off light) The light is ON status once you turn off and turn on power one tme.
- 2. When the light is ON status The light is OFF status once you turn off power and turn on again. (User must turn off and turn on power twice tmes to activate light or use APP / remote to activate light)

Turn Off "Do Not Disturb" Mode:

Press "ON" button three tmes within three seconds and press "OFF" button three tmes, closed successfully once led light flashes four tmes slowly.

Attention: The light will be always "ON" status if you turn on and turn off


App Turn On And Off "Do Not Disturb" Mode Instruction (Check Details In Page 8)

SMARTPHONE APP CONTROL INSTRUCTION

Added Zigbee 3.0 gateway into "Tuya Smart" App (please review instruction of Zigbee 3.0 gateway)


- 1. Connect with power supply.
- 2. Pairing network (attention: factory default is pairing network).

 Way one: Turn off and turn on light 3 tmes or over 3 tmes contnuously, the light is in breathing status.
 - Way two: Long press "SET" key until indicator light flashing.
- 3. Open "Tuya Smart" APP to click Zigbee gateway, then click "Add sub device".
- 4. Click "Indicator is flashing quickly".
- 5. Support APP dimming or group control and etc once added successfully.

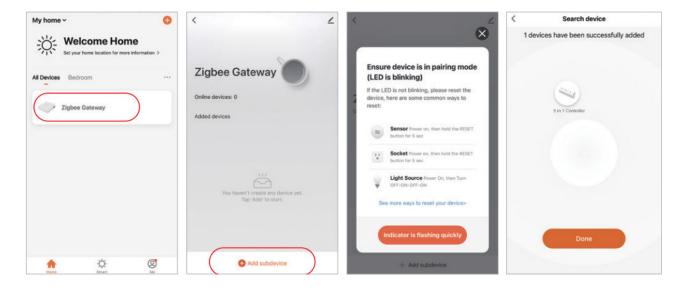

App Turn On And Off "Do Not Disturb" Mode (Default Activated)


Click the light which need to be set up or group control --- click "More" --- click "Power-on behavior" --- turn on or of

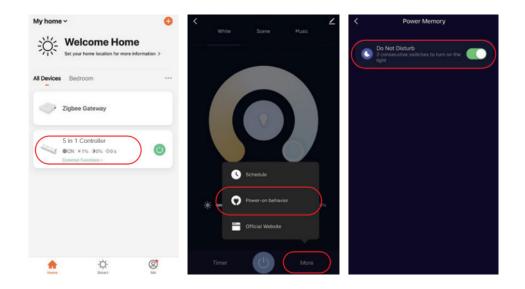

PHILIPS HUE CONTROL INSTRUCTION

Added "Philips Hue" Into APP

- 1. Connect with power supply
- Pairing network (attention: factory default is pairing network)
 Way one: Turn off and turn on light 3 tmes or over 3 tmes continuously, the light is in breathing status.
 - Way two: Long press "SET" key until indicator light flashing.
- 3. Open "Philips Hue" App to click "SETTINGS" and click "Lights"
- 4. Click "+" on the top of right corner
- 5. Click "Search"
- 6. Click "Start configuration", Follow the app instruction to complete configuration

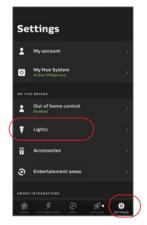









ALEXA VOICE CONTROL INSTRUCTION

1) Alexa Control (Audio Support Zigbee 3.0 Protocol)


You can connect directly if your Amazon ECHO already is built-in zigbee 3.0 protocol, following model with zigbee 3.0 protocol:

Amazon ECHO Plus (2nd Gen), ECHO (4th Gen), ECHO Studio, ECHO Show (2. Gen)

- 1) Connect with power supply
- 2) Pairing network (attention: factory default is pairing network) Way one: Turn off and turn on light 3 tmes or over 3 tmes continuously, the light is in breathing status.

Way two: Long press "SET" key until indicator light flashing.

3) Say to Amazon ECHO "Alexa, Discover devices" Wait for a while to discover device. Voice control is activated

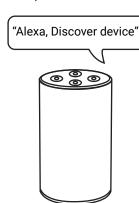



2) Alexa Control (Audio Don't Support Zigbee 3.0 Protocol)

Please add device into Miboxer Zigbee 3.0 gateway if your Alexa don't support zigbee 3.0 protocol (check details in page 8), then start following steps

- 1) Open Alexa App
- 2) Click "More" on the bottom of right corner
- 3) Click "Skills & Games"

- 4) Click " Q " on the top of right corner
- 5) Type into "Smart life" and search
- 6) Click "Smart Life" skill, follow instruction to finish configuration and start voice control

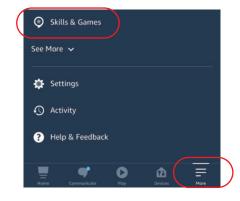

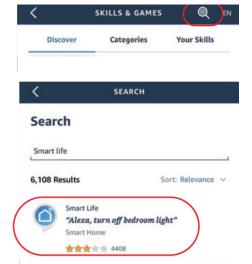



GOOGLE HOME VOICE CONTROL INSTRUCTION


Please add device into Zigbee 3.0 gateway (check details in page 8) and start following steps


- 1) Open Google Home App
- 2) Click "+" on the top of left corner


3) Click "Set up device"


4) Click "Works with Google"

- 5) Click " Q " on the top of right corner
- 6) Type into "Smart life" and search
- 7) Click "Smart Life" skill, follow instructuion to finish configuration and start voice control

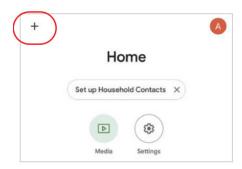

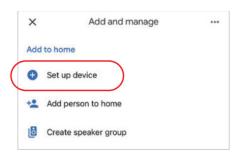


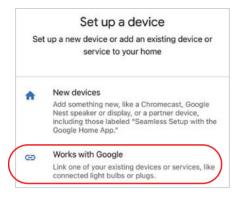

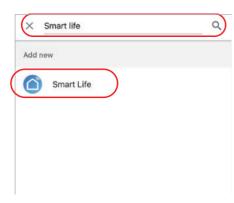


DMX512 LED TRANSMITTER CONTROL (PURCHASED SEPARATELY)


Only for RGB+CCT Output Mode

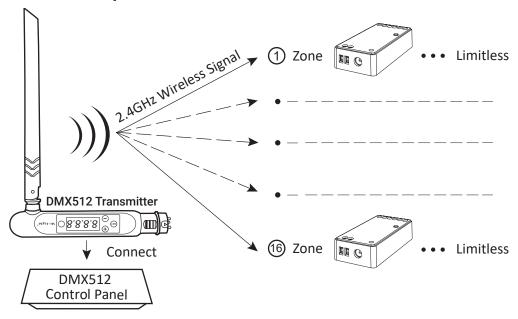


DMX512 LED Transmitter Link/Unlink

Follow instruction of DMX512 transmitter (FUTD01), Choose the zone for the light by pressing "+" or "-" (e.g. "CH12" means zone 12)

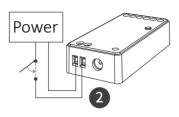

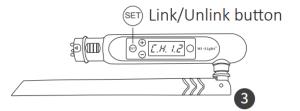

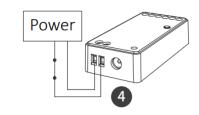

Link

The controller is powered off for 10 seconds and then powered on,or press "SET" button 1 time.

Short press "(SET)" 3 tmes within 3 seconds while the indicator of controller is ON

Link is done once indicator of controller flashes 3 tmes slowly

Unlink

The controller is powered off for 10 seconds and then powered on, or press "SET" button 1 time.

Short press " (SET)" 5 times within 3 seconds while the indicator of controller is ON

Unlink is done once indicator of controller flashes 10 tmes quickly




If the link or unlink failed, please follow the above steps again.

CONNECT TO LED STRIP DIAGRAM



Controller input voltage must be in accordance with the required voltage of LED Strips.

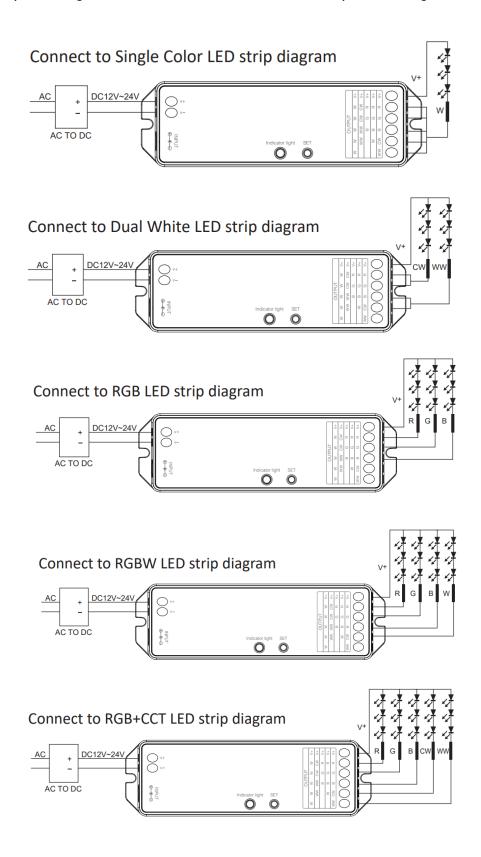



ATTENTION

- 1. Please turn off power supply before installation.
- 2. Please ensure input voltage to be same as requirements from device.
- 3. Don't disassemble device if you are not expert, otherwise it will damage it.
- 4. Please do not use the light in the place with widely range metal area or strong electromagnetic wave nearby, otherwise, the remote distance will be seriously affected.



MIR AORSTONE LIGHTING SPECIALIST

sales@mirrorstone.co.uk www.mirrorstonelighting.co.uk/ 86 Scudamore Road Leicester, LE3 1UQ +44 (0) 116 321 4120